To calibrate Touch settings, please complete the following simple steps (Windows 7):

1. Enter the **Control Panel** menu on your Windows system, then tap or click **Hardware and Sound**. The **Hardware and Sound** menu displays

Concerning and a Control Paral a		P
Adjust your computer's settings System and Security Friendstrukture Size and registering with the post computer is settings Size and registering with the post computer is settings Size and registering with the post computer is settings Image: Size and registering with the post computer is setting with the post com	Verify Chappy * Verify Chappy *	

2. Within the **Tablet PC Settings**, tap or click **Calibrate the screen for pen or touch input**. The **Tablet PC Settings** window opens.

Devices and Printers		
🖼 Add a device Add a privitar Mouse 🚱 Device Manager		
AutoPlay Change default settings for media or devices () Play CDs or other media automatically		
Sound Adjuit system volume Change system sounds Manage autilio devices		
Power Options Change lattery settings Change what the power buttom ds Require a password when the computer values Change when the computer steeps Adjust streem brightmail		
Display Meast and other items larger or smaller Adjust scream needolizes Connect to a projectur Cannect to an external display		
Windows Mobility Center Adjuit.commently used mability satings Adjuit satings before giving a presentation		
Pen and Touch Charge tablet een settings Charge settings for handwriting pesonalization Turn flicks on and aff Set fisike to perform celtain tasks Charge tauch input settings		
Tablet PC Settings Californe the screen for pen or truch input Set tablet buttons to perform center tacks Choose the order of how your acreen rotates Specify which hand you write with		
Realtek HD Audio Manager		
	AutoPlay Change default extings for media or theires Prov CDs or other media externatically Sound Adjuit system values Change upter yours ounds Manage auto devices Power Options Change battery estings Ounge what the computer walks Change what the computer walks Change battery estings Ounge battery estings Ounge to the theorem and the power halt on the computer idents Display Make test and effective them larger to runalie Adjuit commently used methods for immalie Ounge to the theorem and engine Ounge to the theorem and engine Ounge to the test and effective test and the power halt one of the test and the test and the test of the test and the test of the test and the test of	ActoPiay Change default extings for media ar dwices. Play CBs or other media automatically Sound Adjust system volume: Change uptoes sounds. Manage auto devices. Power Options Change what the power buttoes do. Requese a password when the computer views. Change interview. Display Mata test and other themas larger for media. Change interview. Cammer heightness. Windowss Mobility Center Adjust commently used methods for handwriting. Adjust somethes testings. Cammer testings. Windowss Mobility Center Adjust commently used methods in imput settings. Adjust commently used methods in imput settings. Adjust commently used methods in imput settings. Venage testings and methods is imput settings. Adjust commently used methods in imput settings. Tam fields on and will set. Mata test and other testings. Change testings for handwriting personalization. Tam fields on and will set. Venage testings. Change testings for handwriting personalization. Tam fields on and will set. Mata test and change testings. Change testings for handwriting personalization. Tam fields on and will set. Mata test and change testings. Change testings for handwriting personalization. Tam fields on and will set. Reablek HD Audio Manager Set ta

3. Select the desired touch display (e.g. Mobile PC Display) from the **Display Options** section of the **Tablet PC Settings** window and tap or click the **Calibrate** button.

Configure Configure your pen and touch displays. Display options Display Details: 2. VSD220 Touch Input Available Choose the order in which your screen rotates. Go to Orientation	Ucher:	
Configure your pen and touch displays. Display options Display: Details: 2. VSD220 Touch Input Available Choose the order in which your screen rotates. Go to Orientation	Configure	
Display options Display: Details: Details: Choose the order in which your screen rotates. <u>Go to Orientation</u>	Configure yo displays.	our pen and touch
Display: Details: 2. VSD220 Touch Input Available Calibrate Choose the order in which your screen rotates. <u>Go to Orientation</u>	Display optio	ons
Details: Touch Input Available Choose the order in which your screen rotates. Go to Orientation	Display:	2. VSD220 -
Choose the order in which your screen rotates.	Details:	Touch Input Available
	Choose the o	Calibrate

- 4. Follow the on-screen instructions directing you to tap the crosshair targets that appear on the screen. After calibration is complete, the **Digitizer Calibration Tool** window displays.
- 5. Tap or click the **Yes** button to save your calibration settings.

