


2.3.4 Serial port COM2

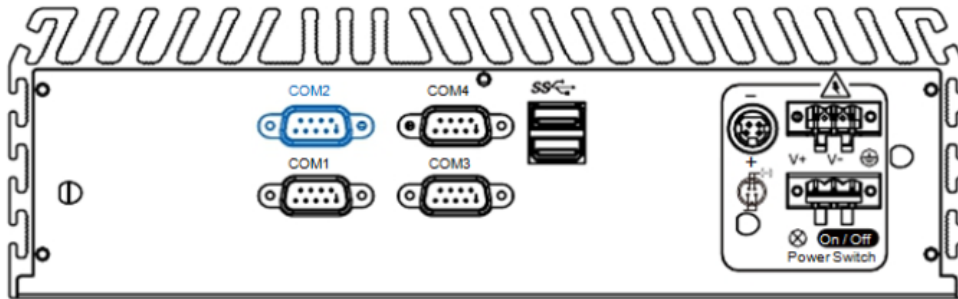

Serial port COM2 can be configured for RS-232, RS-422, or RS-485 with auto flow control. The default setting for COM2 is RS-232. Configuration of COM2 can be done in the BIOS settings.

BIOS options for COM2 are:

RS-232, RS-422 (5-wire), RS-422 (9-wire), RS-485, RS-485, RS-485 with auto-flow control

Pin	RS-232	RS-422 (5-wire)	RS-422 (9-wire)	RS-485 (3-wire)
1	DCD	TXD-	TXD	DATA-
2	RXD	TXD+	TXD+	DATA+
3	TXD	RXD+	RXD+	
4	DTR	RXD-	RXD-	
5	GND	GND	GND	GND
6	DSR		RTS-	
7	RTS		RTS+	
8	CTS		CTS+	
9	RI		CTS-	