



## Veiledning for oppsett av Exor operatørterminal som klient.

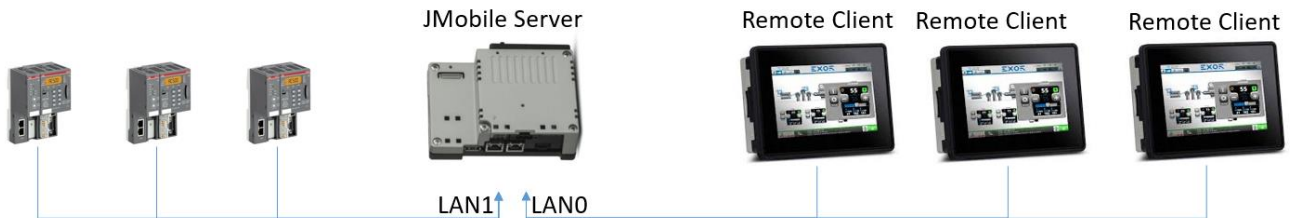


Opp til tre operatørterminaler med Linux operativsystem kan kobles som klienter til felles Jmobile server. Dette gjøres ved å laste klientprogramvare til operatørterminalen

### Start Jmobile Studio.

Generer en update Package fra Run menyen.

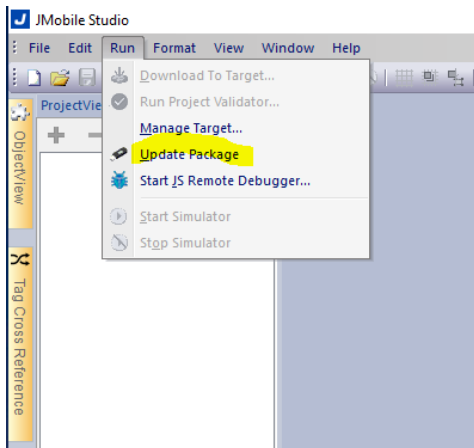


Velg riktig operatørterminal og HMI Client.  
Create til en USB minnepinne.

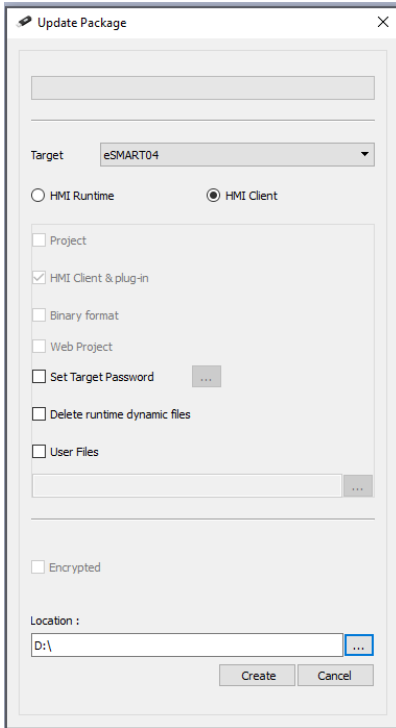


Du har nå en ZIP fil på USB som settes inn i operatørterminalen.

**Trykk Tap Tap på skjermen samtidig med at operatørterminalen spenningsettes.**

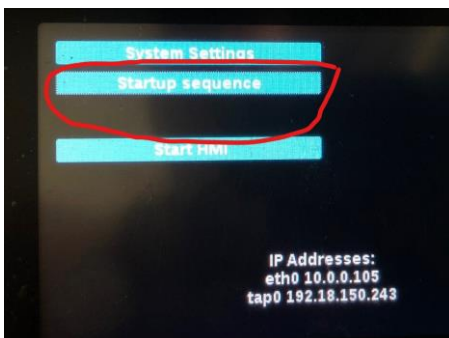


Velg startup sequence for hvilke programmer som skal kjøres.


Velg Install for overføring av ZIP file fra USB

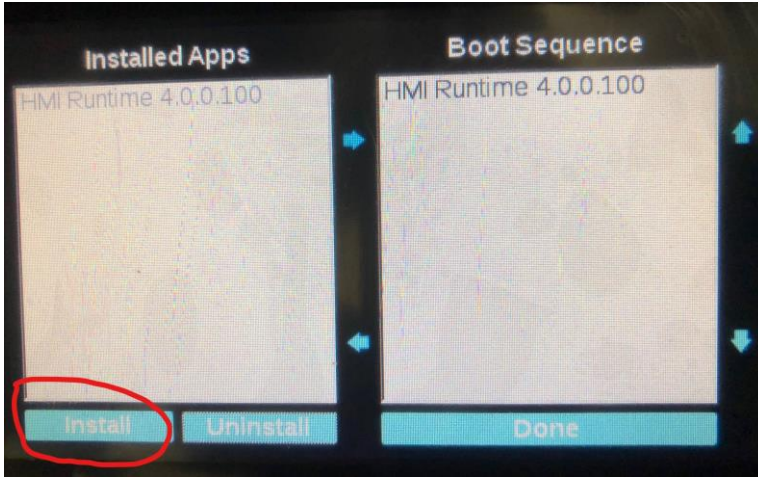


Velg mnt

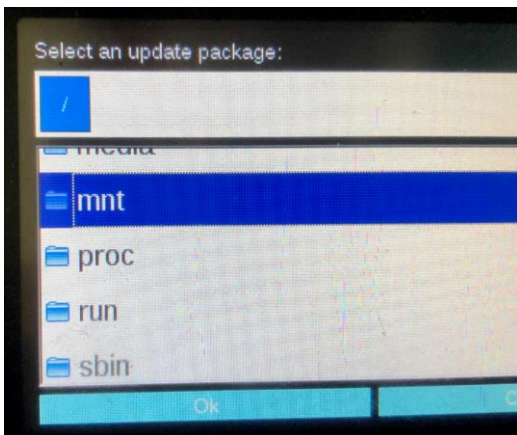


Velg deretter USB minnepinnen

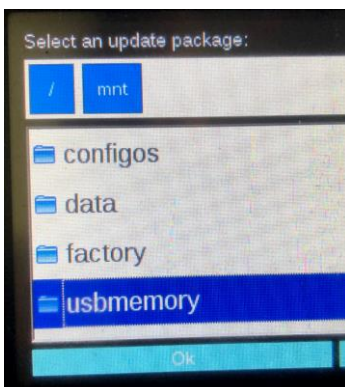

Velg deretter riktig fil fra USB

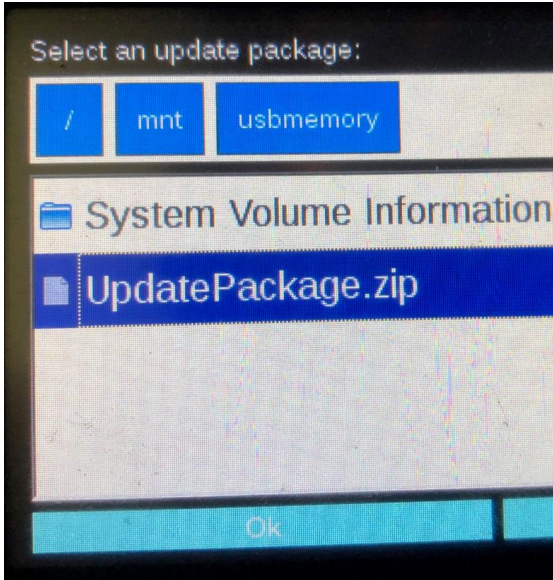


Fjern HMI Runtime og sett inn HMI Client i Boot Sequence.

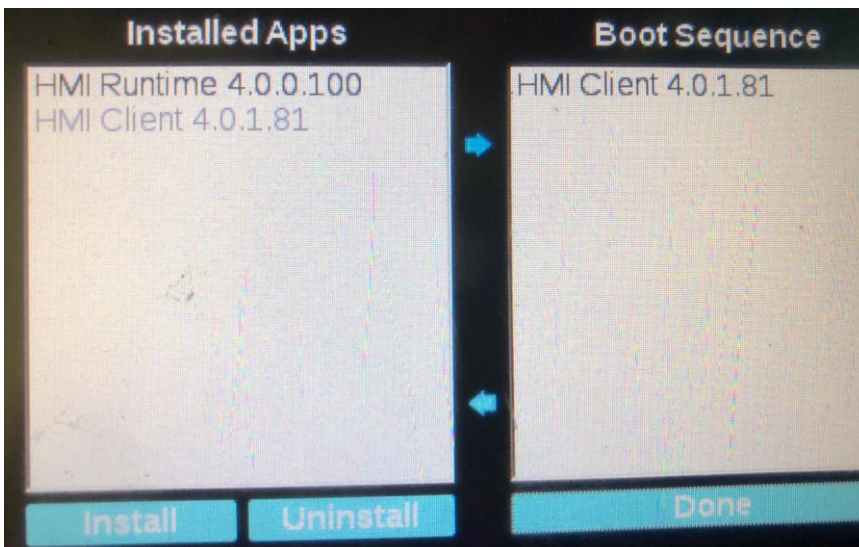

Tips: HMI Runtime kan kjøres samtidig med HMI Client.  
Kan benyttes ved f.eks. dimming av bakgrunnsbelysning fra PLS register.  
HMI Runtime må plasseres nederst i Boot Sequence lista.

## Klient programmet er nå installert.

Sett IP adresse til HMI server panelet.

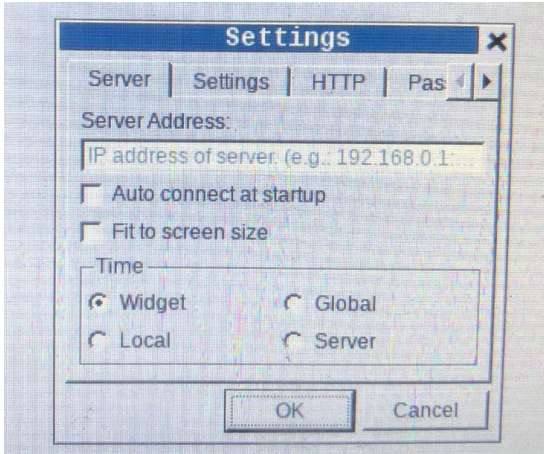


Søk Client i hjelpen til Jmobile studio for ytterligere informasjon

### Client application on HMI


To run the HMI [Client](#) application on Linux HMI device:

1. From the **Run > Update Package** menu, create an Update Package and install the HMI [Client](#) application in to the HMI device (see "Upd...
2. Type the server/device IP address in the Setting dialog that will be available when HMI device start (for example: http://192.168.1.12): HMI

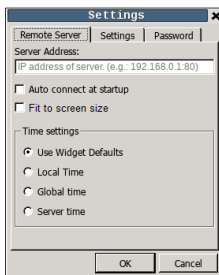

### Context Menu

The Context Menu, available with a right mouse click, will show the below commands:

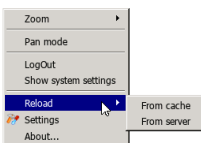

Option	Description
Zoom	Select view size at runtime <ul style="list-style-type: none"> <li>• Zoom In</li> <li>• Zoom Out</li> <li>• Zoom 100%</li> </ul>
Pane Mode	Enables/disables pan mode after a zoom in
Logout	Logs off the current user.
Show system settings	Allow the HMI settings and the management of system components. See " <a href="#">System Settings</a> " for details.
Reload	Reload remote project <ul style="list-style-type: none"> <li>• From cache</li> <li>• From server</li> </ul>
Setting	Open the HMI <a href="#">Client</a> Settings. See " <a href="#">Settings and time zone options</a> " for details <ul style="list-style-type: none"> <li>• Could be password protected</li> </ul>
About	Shows information about the HMI <a href="#">Client</a> version.

24.06.2020 T.S.